

# System MICRO

## SM-DIO | | Manual

HB400 | SM-DIO | | en | 24-30

Digital signal modules - SM M2x



YASKAWA Europe GmbH  
Philipp-Reis-Str. 6  
65795 Hattersheim  
Germany  
Tel.: +49 6196 569-300  
Fax: +49 6196 569-398  
Email: [info@yaskawa.eu](mailto:info@yaskawa.eu)  
Internet: [www.yaskawa.eu.com](http://www.yaskawa.eu.com)

## Table of contents

<b>1</b>	<b>General</b>	<b>4</b>
1.1	Copyright © YASKAWA Europe GmbH	4
1.2	About this manual	5
1.3	Safety instructions	6
<b>2</b>	<b>Basics and mounting</b>	<b>8</b>
2.1	Safety notes for the user	8
2.2	System conception	9
2.3	Dimensions	11
2.4	Mounting	13
2.4.1	Mounting CPU	13
2.4.2	Mounting the extension module	15
2.4.3	Mounting periphery module	16
2.5	Wiring	17
2.5.1	Wiring CPU	17
2.5.2	Wiring periphery module	20
2.6	Demounting	21
2.6.1	Demounting CPU	21
2.6.2	Demounting the extension module	25
2.6.3	Demounting periphery module	26
2.7	Industrial security and installation guidelines	29
2.7.1	Industrial security in information technology	29
2.7.2	Installation guidelines	31
2.8	General data for the System MICRO	34
2.8.1	Use in difficult operating conditions	35
<b>3</b>	<b>Digital in-/output</b>	<b>36</b>
3.1	M21-1BH00 - DI 16xDC 24V	36
3.1.1	Technical data	39
3.2	M22-1BH00 - DO 16xDC 24V 0.5A	41
3.2.1	Diagnostic data	44
3.2.2	Technical data	46
3.3	M22-1HF10 - DO 8xRelay	48
3.3.1	Technical data	51
3.4	M23-1BH00 - DI8/DO8 0.5A	53
3.4.1	Diagnostic data	56
3.4.2	Technical data	58

# 1 General

## 1.1 Copyright © YASKAWA Europe GmbH

<b>All Rights Reserved</b>	<p>This document contains proprietary information of Yaskawa and is not to be disclosed or used except in accordance with applicable agreements.</p> <p>This material is protected by copyright laws. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to Yaskawa) except in accordance with applicable agreements, contracts or licensing, without the express written consent of Yaskawa and the business management owner of the material.</p> <p>For permission to reproduce or distribute, please contact: YASKAWA Europe GmbH, European Headquarters, Philipp-Reis-Str. 6, 65795 Hattersheim, Germany</p> <p>Tel.: +49 6196 569 300 Fax.: +49 6196 569 398 Email: <a href="mailto:info@yaskawa.eu">info@yaskawa.eu</a> Internet: <a href="http://www.yaskawa.eu.com">www.yaskawa.eu.com</a></p>
<b>EC conformity declaration</b>	<p>Hereby, YASKAWA Europe GmbH declares that the products and systems are in compliance with the essential requirements and other relevant provisions. Conformity is indicated by the CE marking affixed to the product.</p>
<b>Conformity Information</b>	<p>For more information regarding CE marking and Declaration of Conformity (DoC), please contact your local representative of YASKAWA Europe GmbH.</p>
<b>Trademarks</b>	<p>MICRO is a registered trademark of YASKAWA Europe GmbH.</p> <p>All other trademarks, logos and service or product marks specified herein are owned by their respective companies.</p>
<b>General terms of use</b>	<p>Every effort has been made to ensure that the information contained in this document was complete and accurate at the time of publishing. We cannot guarantee that the information is free of errors, and we reserve the right to change the information at any time. There is no obligation to inform the customer about any changes. The customer is requested to actively keep his documents up to date. The customer is always responsible for the deployment of the products with the associated documentation, taking into account the applicable directives and standards.</p> <p>This documentation describes all hardware and software units and functions known today. It is possible that units are described that do not exist at the customer. The exact scope of delivery is described in the respective purchase contract.</p>
<b>Document support</b>	<p>Contact your local representative of YASKAWA Europe GmbH if you have errors or questions regarding the content of this document. You can reach YASKAWA Europe GmbH via the following contact:</p> <p>Email: <a href="mailto:Documentation.HER@yaskawa.eu">Documentation.HER@yaskawa.eu</a></p>
<b>Technical support</b>	<p>Contact your local representative of YASKAWA Europe GmbH if you encounter problems or have questions regarding the product. If such a location is not available, you can reach the Yaskawa customer service via the following contact:</p> <p>YASKAWA Europe GmbH, European Headquarters, Philipp-Reis-Str. 6, 65795 Hattersheim, Germany Tel.: +49 6196 569 500 (hotline) Email: <a href="mailto:support@yaskawa.eu">support@yaskawa.eu</a></p>

## 1.2 About this manual

### Objective and contents

The manual describes the digital signal modules M2x of the System MICRO.

- It describes the structure, configuration and application.
- The manual is targeted at users who have a background in automation technology.
- The manual consists of chapters. Each chapter describes a completed topic.
- For guidance, the manual provides:
  - An overall table of contents at the beginning of the manual.
  - References with pages numbers.

### Icons and headings

Important passages in the text are highlighted by following icons and headings:



#### **DANGER**

Immediate or likely danger. Personal injury is possible.



#### **CAUTION**

Damages to property is likely if these warnings are not heeded.



*Supplementary information and useful tips.*

## 1.3 Safety instructions

### Suitability for use

- It is the customer's responsibility to confirm conformity with any standards, codes, or regulations that apply if the Yaskawa product is used in combination with any other products.
- The customer must confirm that the Yaskawa product is suitable for the systems, machines, and equipment used by the customer.
- If the Yaskawa product is used in a manner not specified in the manual, the protection provided by the Yaskawa product may be impaired.
- Consult with Yaskawa to determine whether use in the following applications is acceptable. If use in the application is acceptable, use the Yaskawa product with extra allowance in ratings and specifications, and provide safety measures to minimize hazards in the event of failure.
  - Outdoor use, use involving potential chemical contamination or electrical interference, or use in conditions or environments not described in product catalogs or manuals
  - Nuclear energy control systems, combustion systems, railroad systems, aviation systems, vehicle systems, medical equipment, amusement machines, and installations subject to separate industry or government regulations
  - Systems, machines, and equipment that may present a risk to life or property
  - Systems that require a high degree of reliability, such as systems that supply gas, water, or electricity, or systems that operate continuously 24 hours a day
  - Other systems that require a similar high degree of safety
- Never use the Yaskawa product for an application involving serious risk to life or property without first ensuring that the system is designed to secure the required level of safety with risk warnings and redundancy, and that the Yaskawa product is properly rated and installed.
- The circuit examples and other application examples described in product catalogs and manuals are for reference. Check the functionality and safety of the actual devices and equipment to be used before using the Yaskawa product.
- Read and understand all use prohibitions and precautions, and operate the Yaskawa product correctly to prevent accidental harm to third parties.

### Field of application

The system is constructed and produced for:

- communication and process control
- general control and automation tasks
- industrial applications
- operation within the environmental conditions specified in the technical data
- installation into a cubicle



#### **DANGER**

This device is not certified for applications in

- in explosive environments (EX-zone)

**Exclusion of Liability**

- The Yaskawa product is not suited for use in life-support machines or systems.
- Contact a Yaskawa representative or your Yaskawa sales representative if you are considering the application of this Yaskawa product for special purposes, such as machines or systems used for passenger cars, medicine, airplanes and aerospace, nuclear power, electric power or undersea relaying.

**DANGER**

When you use this Yaskawa product in applications where its failure could cause the loss of human life, a serious accident, or physical injury, you must install applicable safety devices.

- If you do not correctly install safety devices, it can cause serious injury or death.

**Disposal**

National rules and regulations apply to the disposal of the unit!

**Documentation**

The manual must be available to all personnel in the:

- project design department
- installation department
- commissioning
- operation

**CAUTION**

The following conditions must be met before using or commissioning the components described in this manual:

- Hardware modifications to the process control system should only be carried out when the system has been disconnected from power!
- Installation and hardware modifications only by properly trained personnel.
- The national rules and regulations of the respective country must be satisfied (installation, safety, EMC ...)

## 2 Basics and mounting

### 2.1 Safety notes for the user



#### DANGER

##### Protection against dangerous voltages

- When using System MICRO modules, the user must be protected from touching hazardous voltage.
- You must therefore create an insulation concept for your system that includes safe separation of the potential areas of ELV and hazardous voltage.
- Here, observe the insulation voltages between the potential areas specified for the System MICRO modules and take suitable measures, such as using PELV/SELV power supplies for System MICRO modules.

#### Handling of electrostatic sensitive modules

The modules are equipped with highly integrated components in MOS technology. These components are highly sensitive to over-voltages that occur, e.g. with electrostatic discharge. The following symbol is used to identify these hazardous modules:



The symbol is located on modules, module racks or on packaging and thus indicates electrostatic sensitive modules. Electrostatic sensitive modules can be destroyed by energies and voltages that are far below the limits of human perception. If a person who is not electrically discharged handles electrostatic sensitive modules, voltages can occur and damage components and thus impair the functionality of the modules or render the modules unusable. Modules damaged in this way are in most cases not immediately recognized as faulty. The error can only appear after a long period of operation. Components damaged by static discharge can show temporary faults when exposed to temperature changes, vibrations or load changes. Only the consistent use of protective devices and responsible observance of the handling rules can effectively prevent malfunctions and failures on electrostatic sensitive modules.

#### Shipping of modules

Please always use the original packaging for shipping.

#### Measurement and modification of electrostatic sensitive modules

For measurements on electrostatic sensitive modules the following must be observed:

- Floating measuring instruments must be discharged before use.
- Measuring instruments used must be grounded.

When modifying electrostatic sensitive modules, ensure that a grounded soldering iron is used.




#### CAUTION

When working with and on electrostatic sensitive modules, make sure that personnel and equipment are adequately grounded.



## 2.2 System conception

### Overview

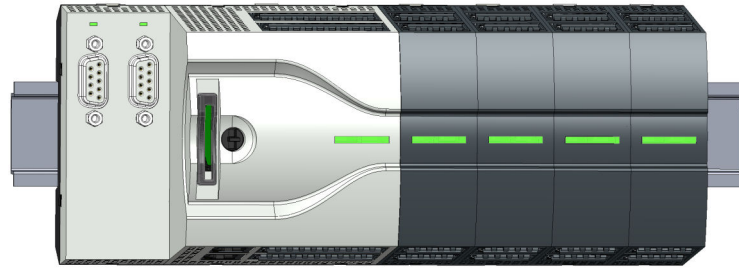


The System MICRO is a modular automation system for assembly on a 35mm mounting rail. By means of periphery modules this system may be adapted matching to your automation tasks. In addition, it is possible to expand your CPU by appropriate interfaces. The wiring complexity is low, because the DC 24V electronic section supply is integrated to the backplane bus and this allows replacement with standing wire.

### Components

- CPU
- Extension module
- Power supply
- Periphery module

### CPU

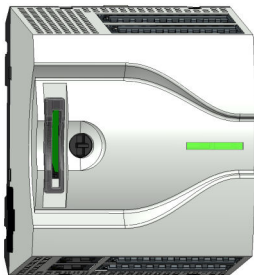

With the CPU electronic, input/output components and power supply are integrated to one casing. In addition, up to 8 periphery modules of the System MICRO can be connected to the backplane bus. As head module via the integrated power module for power supply CPU electronic and the I/O components are supplied as well as the electronic of the periphery modules, which are connected via backplane bus. To connect the power supply of the I/O components and for DC 24V electronic power supply of the periphery modules, which are connected via backplane bus, the CPU has removable connectors. By installing of up to 8 periphery modules at the backplane bus of the CPU, these are electrically connected, this means these are assigned to the backplane bus and connected to the DC 24V electronic power supply.

### Extension module



By using extension modules you can extend the interfaces of the CPU. The attachment to the CPU is made by plugging on the left side of the CPU. You can only connect one extension module to the CPU at a time.

System conception

**Power supply**



The power supply can be mounted together with System MICRO components at the mounting rail. It serves for electronics and power supply.


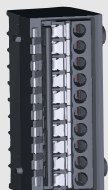
**Periphery module**



By means of up to 8 periphery modules, you can extend the internal I/O areas. The attachment to the CPU is made by plugging them on the right side of the CPU.

**Spare parts**

The following spare parts are available for the System MICRO:

Spare part	Order no.	Description	Packaging unit
	M92-9BC00	5-fold connector for System MICRO module.	5 pieces
	M92-9BH00	10-fold connector for System MICRO CPU.	5 pieces




**CAUTION**

Please note that you may only use the spare parts with Yaskawa modules. Use with third-party modules is not allowed!


## 2.3 Dimensions

### Dimensions CPU M13C

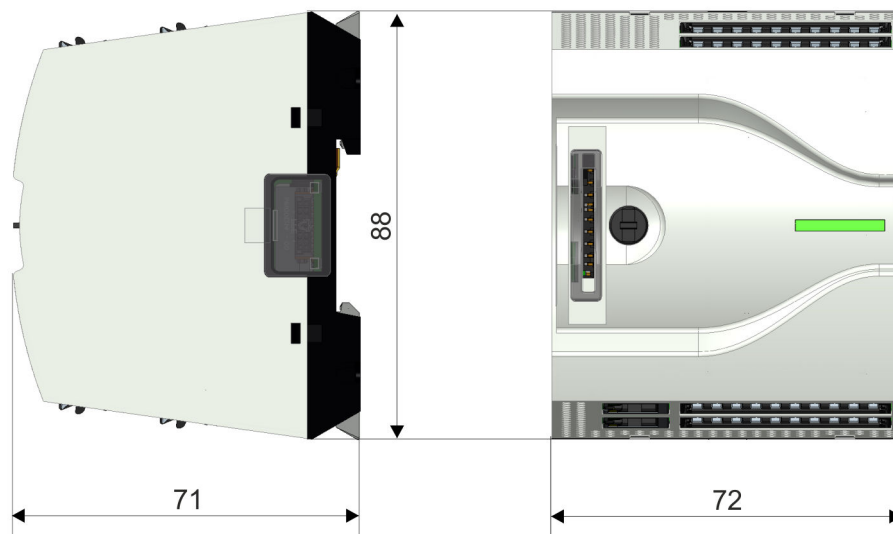

Dimensions in mm


### Dimensions extension module EM M09

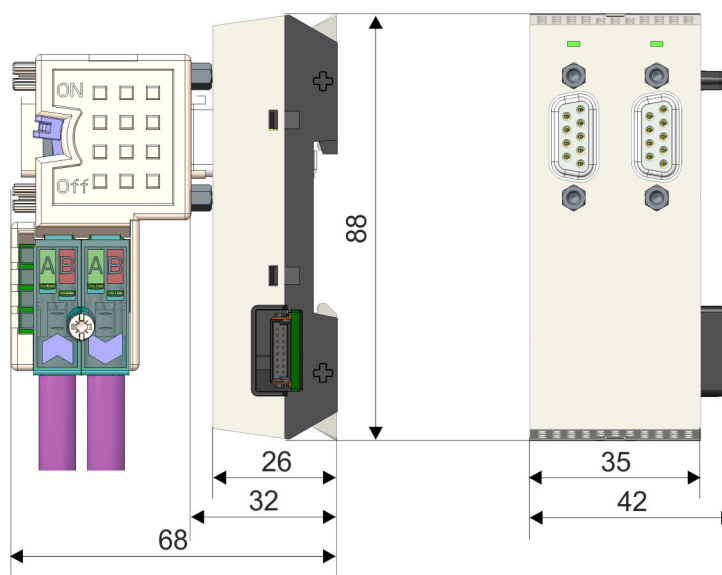


Dimensions in mm

Dimensions

Dimensions power supply

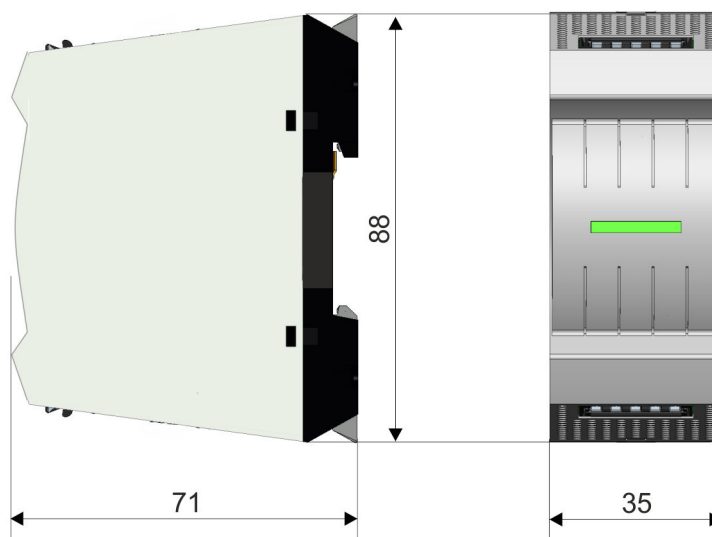

Dimensions periphery module

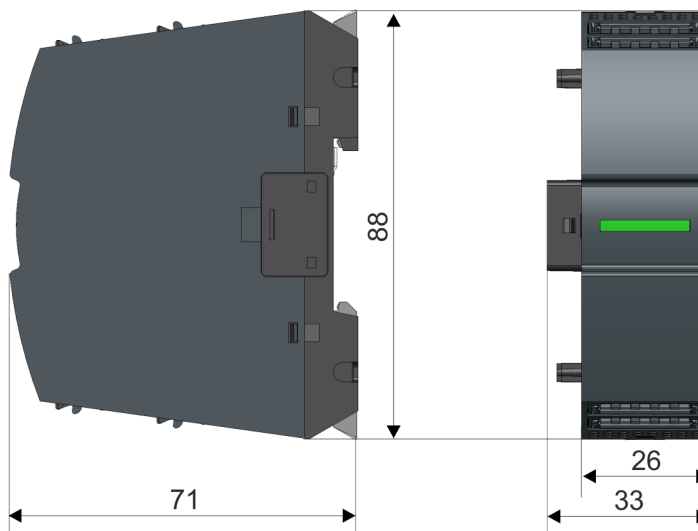

Dimensions in mm

## 2.4 Mounting



### CAUTION

#### Requirements for UL compliance use

- Use for power supply exclusively SELV/PELV power supplies.

### 2.4.1 Mounting CPU

#### 2.4.1.1 Mounting CPU without mounting rail




### CAUTION

Mounting without mounting rail is only permitted, if you only want to use the CPU without extension and periphery modules. Otherwise, a mounting rail must always be used for EMC technical reasons.

#### Proceeding

You can screw the CPU to the back wall by means of screws via the locking levers. This happens with the following proceeding:

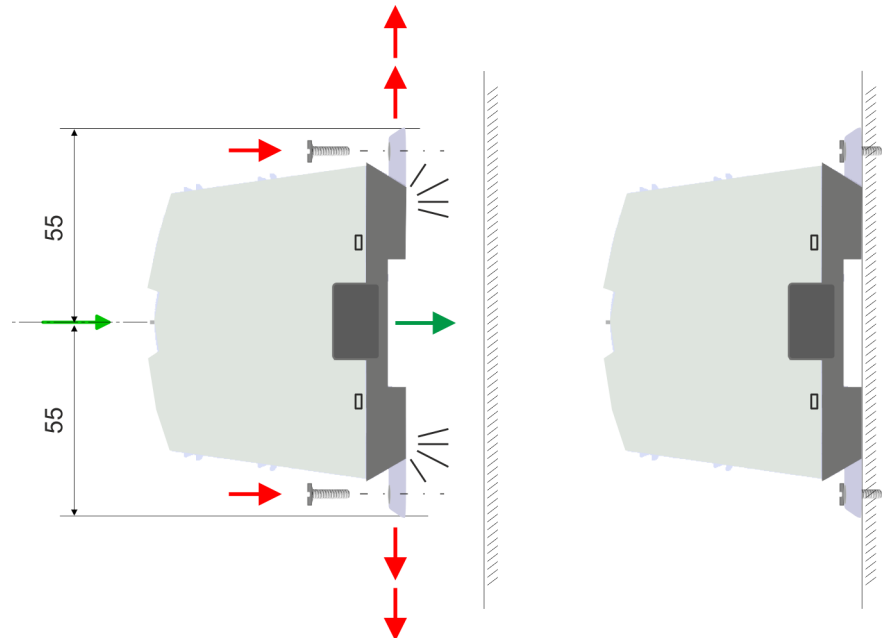


Dimensions in mm

1. The CPU has a locking lever on the upper and lower side. Pull these levers outwards as shown in the figure, until these engage 2x audible.
  - ➔ By this openings on the locking levers get visible.
2. Use the appropriate screws to fix your CPU to your back wall. Consider the installation clearances for the CPU.
  - ➔ The CPU is now mounted and can be wired.

2.4.1.2 Mounting with mounting rail

Proceeding

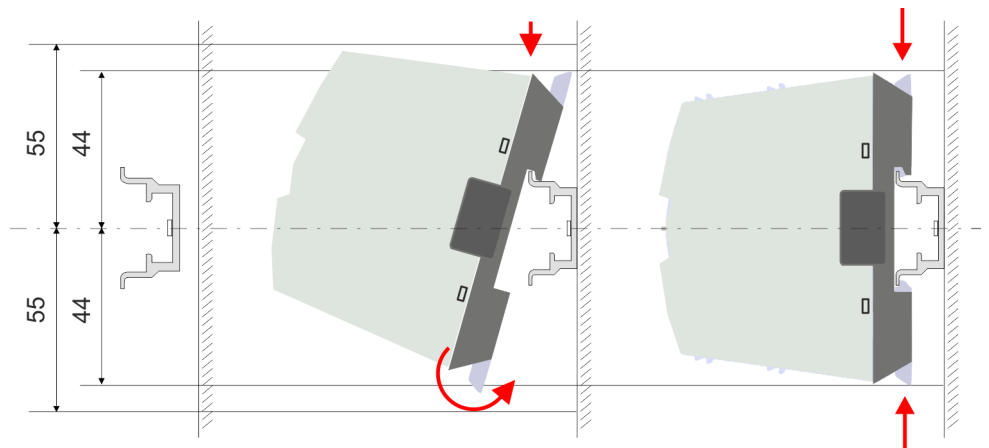


Dimensions in mm

1. → Mount the mounting rail. Please consider that a clearance from the middle of the mounting rail of at least 44mm respectively 55mm above and below exists.
2. → The CPU has a locking lever on the upper and lower side. Pull these levers outwards as shown in the figure, until these engage audible.




**CAUTION**


It is not allowed to mount the module sideways on the mounting rail, as otherwise the module may be damaged.

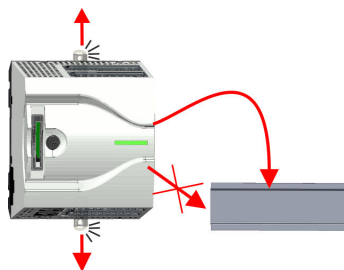

3. → Plug the CPU from the top onto the mounting rail and turn the CPU downward until it rests on the mounting rail.

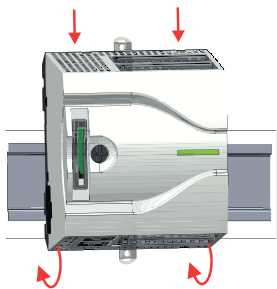


4. → Move the CPU on the mounting rail at its position.

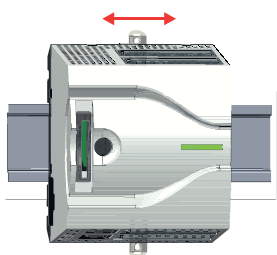

5. → To fix the CPU at the mounting rail, move the locking levers back to the initial position.

→ The CPU is now mounted and can be wired.

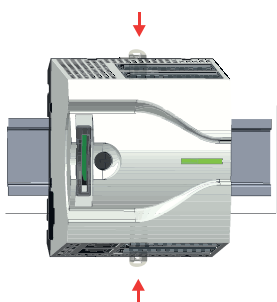


## 2.4.2 Mounting the extension module


### Proceeding

You have the possibility to extend the interfaces of the CPU by plugging an extension module. For this the extension module is plugged at the left side of the CPU. The mounting happens with the following proceeding:

1. → Remove the bus cover with a screwdriver on the left side of the CPU.

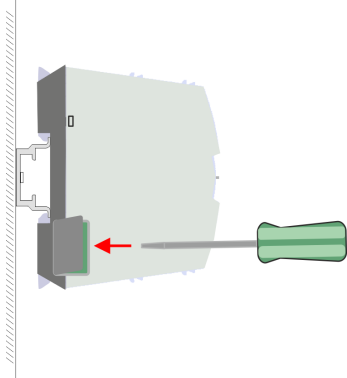


2. → The extension module has a locking lever on the upper and lower side. Pull these levers outwards as shown in the figure, until these engage audible.

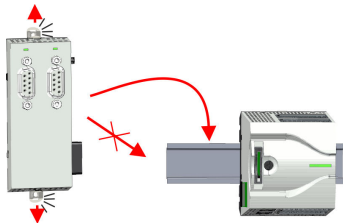


### CAUTION

It is not allowed to mount the module sideways on the mounting rail, as otherwise the module may be damaged.


3. → To mount plug the extension module from the top onto the mounting rail and turn the extension module downward until it rests on the mounting rail.

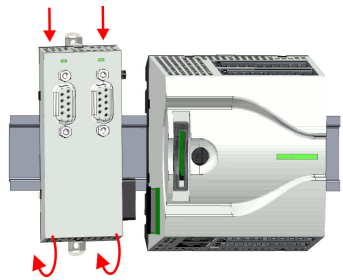

4. → Attach the extension module to the CPU by sliding the extension module on the mounting rail to the right until the interface connector slightly locks into the CPU.

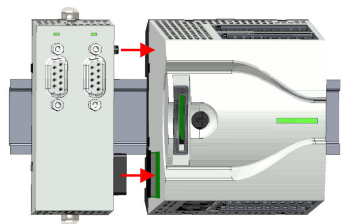

5. → To fix the extension module at the mounting rail, move the locking levers back to the initial position.

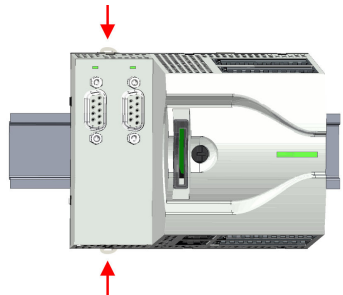


### 2.4.3 Mounting periphery module


**Proceeding**

You have the possibility to extend the periphery area of the CPU by plugging up to 8 periphery modules. For this the periphery modules are plugged at the right side of the CPU. The mountings happens with the following proceeding:

1. → Remove the bus cover with a screwdriver on the right side of the CPU.

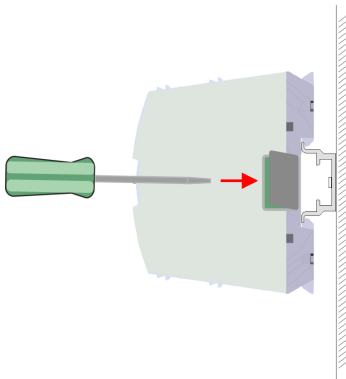


2. → Each periphery module has a locking lever on its upper and lower side. Pull these levers outwards as shown in the figure, until these engage audible.

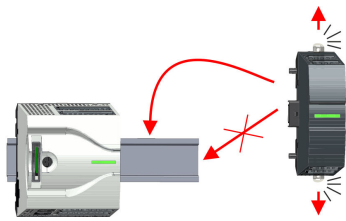


**CAUTION**

It is not allowed to mount the module sideways on the mounting rail, as otherwise the module may be damaged.


3. → To mount plug the periphery module from the top onto the mounting rail and turn the periphery module downward until it rests on the mounting rail.

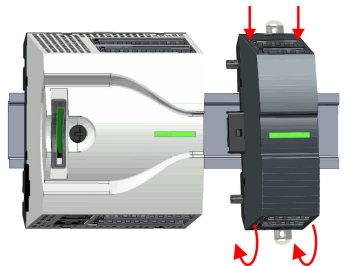

4. → Attach the periphery module to the CPU by sliding the periphery module on the mounting rail to the left until the interface connector slightly locks into the CPU.

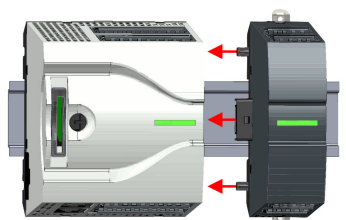

5. → To fix the periphery module at the mounting rail, move the locking levers back to the initial position.

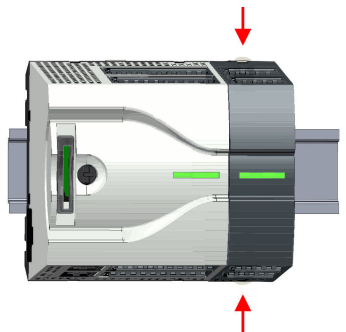

6. → Proceed in this way with additional periphery modules.



## 2.5 Wiring



### DANGER

#### Consider strain relief of the supply lines!

Since the plug for the supply lines of the input voltage has no (double) insulation, not permanently fixed supply lines must be relieved from push and pull!



### CAUTION

#### Consider temperature for external cables!

Cables may experience temperature increase due to system heat dissipation. Thus the cabling specification must be chosen 25°C above ambient temperature!



### CAUTION

#### Separate insulation areas!


The system is specified for SELV/PELV environment. Devices, which are attached to the system must meet these specifications. Installation and cable routing other than SELV/PELV specification must be separated from the system's equipment!

### 2.5.1 Wiring CPU

#### CPU connector

For wiring the CPU has removable connectors. With the wiring of the connectors a "push-in" spring-clip technique is used. This allows a quick and easy connection of your signal and supply lines. The clamping off takes place by means of a screwdriver.


#### Data



$U_{max}$	30V DC
$I_{max}$	10A
Cross section	0.2 ... 1.5mm <sup>2</sup> (AWG 24 ... 16)
Stripping length	10mm

Use for wiring rigid wires respectively use wire sleeves. When using stranded wires you have to press the release button with a screwdriver during the wiring.


#### Wiring procedure

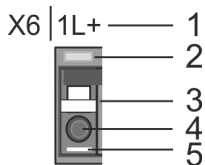


- 1 Labeling on the casing
- 2 Status LED
- 3 Release area
- 4 Connection hole for wire
- 5 Pin 1 of the connector is labelled by a white line

#### Insert wire

The wiring happens without a tool.

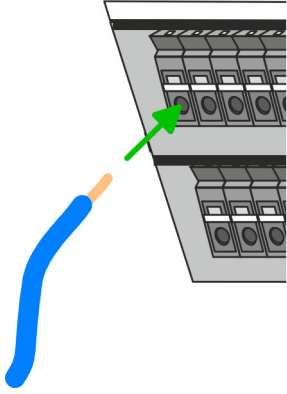

Remove wire







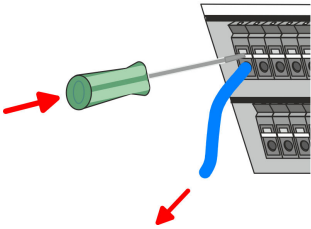



- Determine according to the casing labelling the connection position and insert through the round connection hole of the according contact your prepared wire until it stops, so that it is fixed.
- ➔ By pushing the contact spring opens, thus ensuring the necessary contact pressure.

The wire is to be removed by means of a screwdriver with 2.5mm blade width.

1. → Press with your screwdriver vertically at the release button.
  - ➔ The contact spring releases the wire.
2. → Pull the wire from the round hole.

Standard wiring

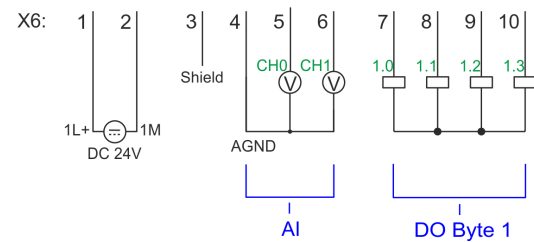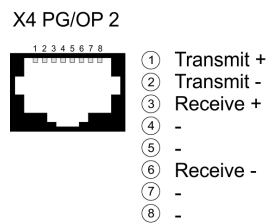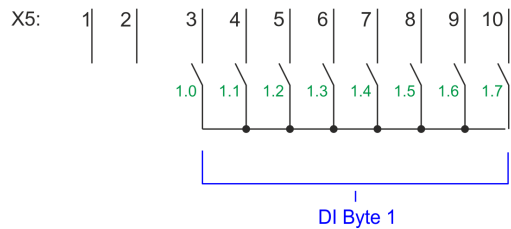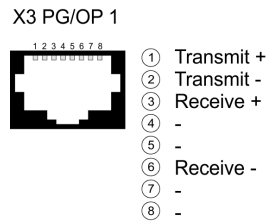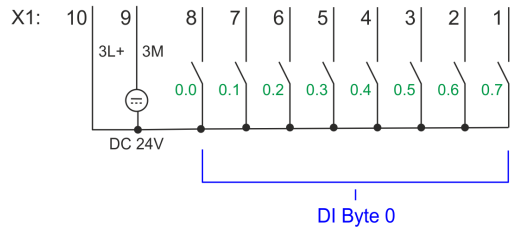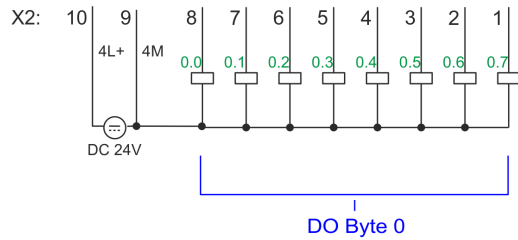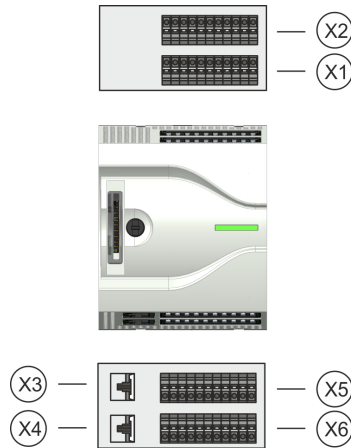

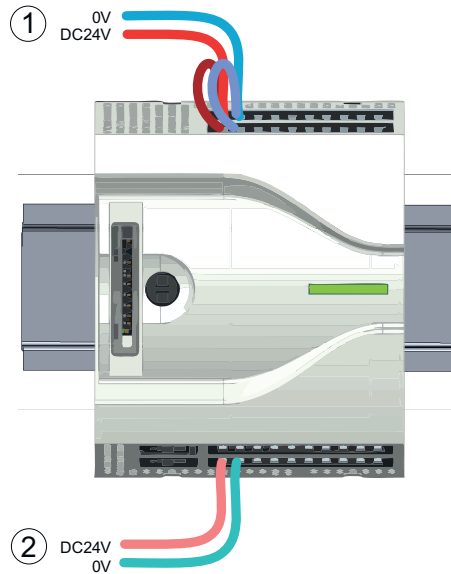

- (1) X2: 4L+: DC 24V power section supply for integrated outputs  
X1: 3L+: DC 24V power section supply for integrated inputs
- (2) X6: 1L+ DC 24V for electronic power supply



The electronic power section supply is internally protected against higher voltage by fuse. The fuse is located inside the CPU and can not be changed by the user.



Fusing



**CAUTION**

- The power section supply of the internal DOs is to be externally protected with a 8A fuse (fast) respectively by a line circuit breaker 8A characteristics Z.

Remove connector

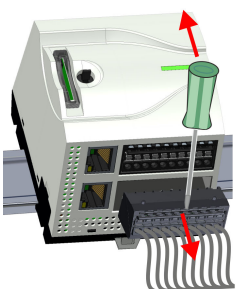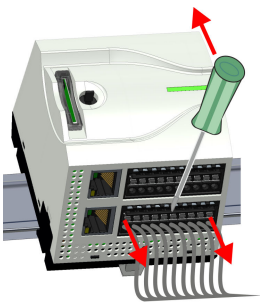

By means of a screwdriver there is the possibility to remove the connectors e.g. for module exchange with a fix wiring. For this each connector has indentations for unlocking at the top. Unlocking takes place by the following proceeding:

1. → Remove connector:

Insert your screwdriver from above into one of the indentations.

2. → Push the screwdriver backwards:

→ The connector is unlocked and can be removed.



**CAUTION**

Via wrong operation such as pressing the screwdriver downward, the release lever may be damaged.

3. → Plug connector:


The connector is plugged by plugging it directly into the release lever.

### 2.5.2 Wiring periphery module

#### Periphery module connector

For wiring the periphery module has removable connectors. With the wiring of the connectors a "push-in" spring-clip technique is used. This allows a quick and easy connection of your signal and supply lines. The clamping off takes place by means of a screwdriver.


#### Data



$U_{max}$  240V AC / 30V DC  
 $I_{max}$  10A  
 Cross section 0.2 ... 1.5mm<sup>2</sup> (AWG 24 ... 16)  
 Stripping length 10mm


Use for wiring rigid wires respectively use wire sleeves. When using stranded wires you have to press the release button with a screwdriver during the wiring.

#### Wiring procedure

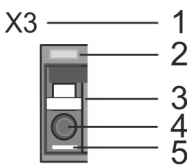

- 1 Labeling on the casing
- 2 Status LED
- 3 Release area
- 4 Connection hole for wire
- 5 Pin 1 of the connector is labelled by a white line


#### Insert wire

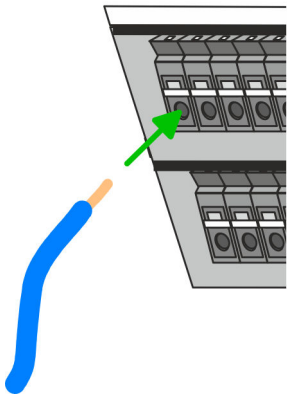

The wiring happens without a tool.

- Determine according to the casing labelling the connection position and insert through the round connection hole of the according contact your prepared wire until it stops, so that it is fixed.
  - ➔ By pushing the contact spring opens, thus ensuring the necessary contact pressure.

#### Remove wire

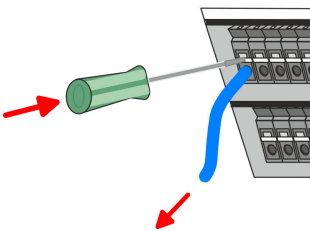

The wire is to be removed by means of a screwdriver with 2.5mm blade width.


1. → Press with your screwdriver vertically at the release button.
  - ➔ The contact spring releases the wire.
2. → Pull the wire from the round hole.

#### Fusing



#### CAUTION

- The power section supply of the output modules DO16 is to be externally protected with a 10A fuse (fast) respectively by a line circuit breaker 10A characteristics Z.
- The power section supply of the output part of the DIO8 is to be externally protected with a 5A fuse (fast) respectively by a line circuit breaker 5A characteristics Z.

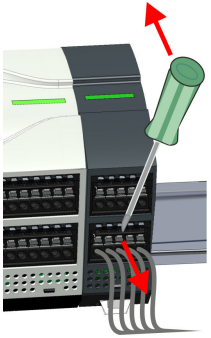**Remove connector**

By means of a screwdriver there is the possibility to remove the connectors e.g. for module exchange with a fix wiring. For this each connector has indentations for unlocking at the top. Unlocking takes place by the following proceeding:

1. → Remove connector:

Insert your screwdriver from above into one of the indentations.



2. → Push the screwdriver backwards:


→ The connector is unlocked and can be removed.

**CAUTION**

Via wrong operation such as pressing the screwdriver downward, the release lever may be damaged.

3. → Plug connector:

The connector is plugged by plugging it directly into the release lever.

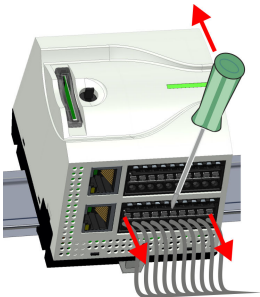
**2.6 Demounting****2.6.1 Demounting CPU****Remove connector**

By means of a screwdriver there is the possibility to remove the connectors e.g. for module exchange with a fix wiring. For this each connector has indentations for unlocking at the top. Unlocking takes place by the following proceeding:

1. → Power-off your system.

2. → Remove connector:

Insert your screwdriver from above into one of the indentations.

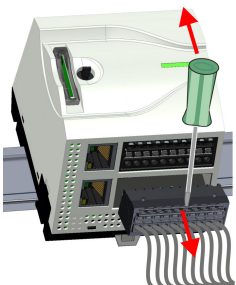

3. → Push the screwdriver backwards:

→ The connector is unlocked and can be removed.

**CAUTION**


Via wrong operation such as pressing the screwdriver downward, the connector may be damaged!

4. → In this way, remove all plugged connectors on the CPU.


**CPU replacement (stand-alone)**

If more modules are connected to the CPU → *'Option: CPU replacement in a system'...page 23*. If no other modules are connected to the CPU, the CPU is replaced according to the following proceeding:


1. → Use a screwdriver to pull the locking levers of the CPU outwards until these engage audible.

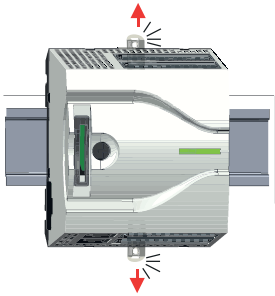

2. → Remove the CPU with a rotation upwards from the mounting rail.

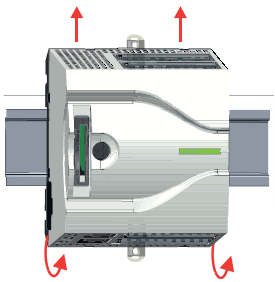


3. → Pull the locking levers of the CPU outwards until these engage audible.

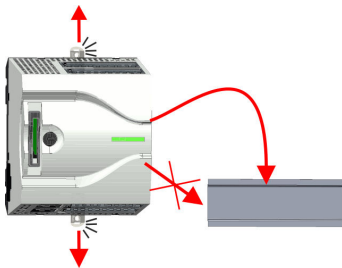


**CAUTION**

It is not allowed to mount the module sideways on the mounting rail, as otherwise the module may be damaged!


4. → Plug the CPU from the top onto the mounting rail and turn the CPU downward until it rests on the mounting rail.

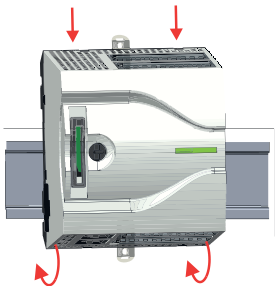


5. → Move the CPU on the mounting rail at its position.

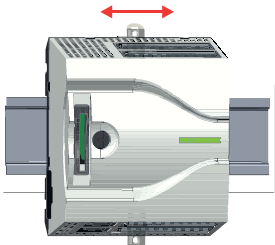


6. → To fix the CPU at the mounting rail, move the locking levers back to the initial position.

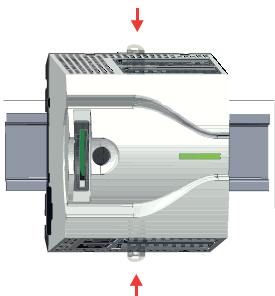

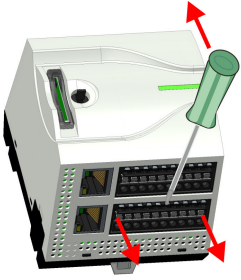


7. → Remove the connectors, which are not necessary at the CPU.

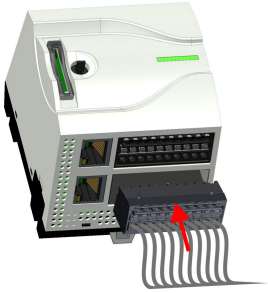


8. → Plug again the wired connectors.  
 → Now you can bring your system back into operation.

#### Option: CPU replacement in a system


In the following the replacement of a CPU in a system is shown:

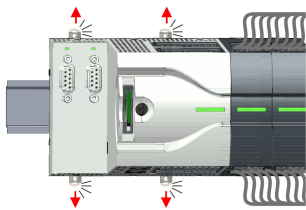


1. → If there is an extension module connected to the CPU, you have to remove it from the CPU. For this use a screwdriver to pull the locking levers of the extension module and CPU outwards until these engage audible.

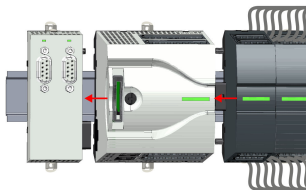

2. → Disconnect all the modules, which are connected to the CPU by moving the CPU along with the extension module on the mounting rail.

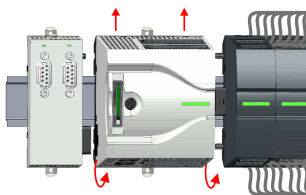

3. → Remove the CPU with a rotation upwards from the mounting rail.

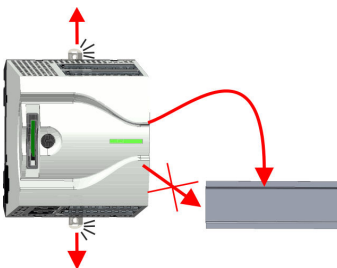


4. → Pull the locking levers of the CPU outwards until these engage audible.




#### CAUTION

It is not allowed to mount the module sideways on the mounting rail, as otherwise the module may be damaged!


Demounting > Demounting CPU

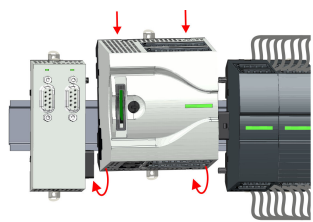


**5.** → For mounting pull the locking levers of the CPU outwards until these engage audible. Plug the CPU from the top onto the mounting rail and turn the CPU downward until it rests on the mounting rail.

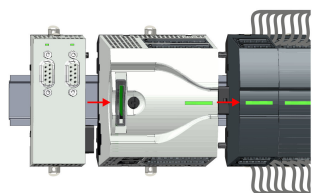


**6.** → Rebind your modules by moving the CPU along with the extension module on the mounting rail.

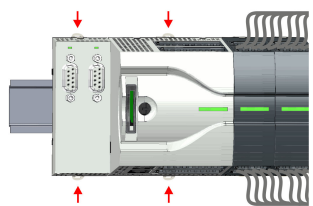

**7.** → To fix the CPU at the mounting rail, move the locking levers back to the initial position.

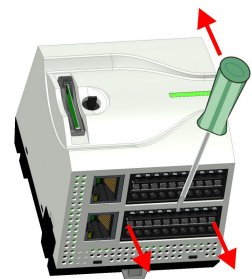

**8.** → Remove the connectors, which are not necessary at the CPU.







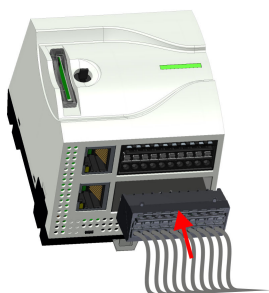


**9.** → Plug again the wired connectors.  
 ➔ Now you can bring your system back into operation.



## 2.6.2 Demounting the extension module

### Proceeding

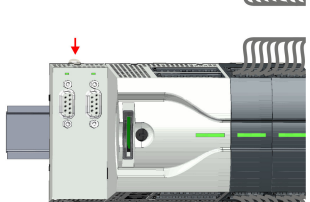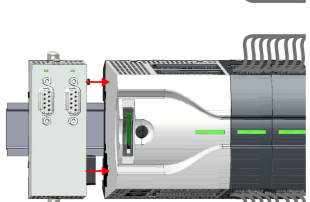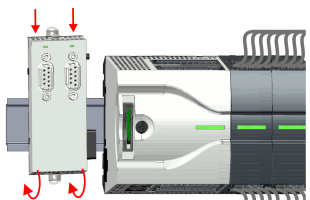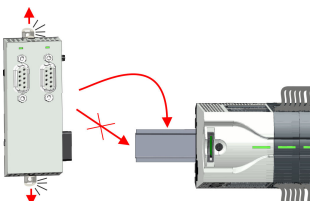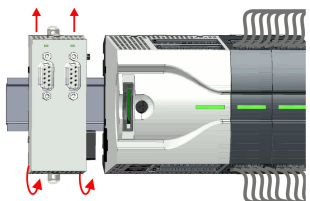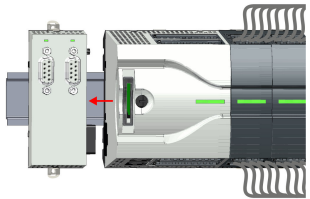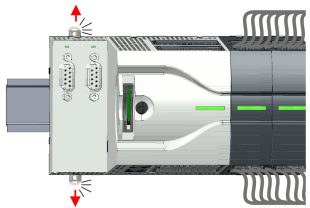

1. → Power-off your system.
2. → Remove the corresponding bus connectors.
3. → Use a screwdriver to pull the locking levers of the extension module outwards until these engage audibly.

4. → Remove the extension module from the CPU by sliding it on the mounting rail.

5. → Remove the extension module with a rotation upwards from the mounting rail.

6. → Pull the locking levers of the extension module outwards until these engage audibly.



### CAUTION

It is not allowed to mount the module sideways on the mounting rail, as otherwise the module may be damaged!

7. → Plug the extension module from the top onto the mounting rail and turn the extension module downward until it rests on the mounting rail.

8. → Reattach the extension module to the CPU by sliding the extension module on the mounting rail to the right until the interface connector slightly locks into the CPU.

9. → Move the locking levers back to the initial position.

10. → Plug the corresponding bus connectors.
  - ➔ Now you can bring your system back into operation.

### 2.6.3 Demounting periphery module

#### Remove connector

By means of a screwdriver there is the possibility to remove the connectors e.g. for module exchange with a fix wiring. For this each connector has indentations for unlocking at the top. Unlocking takes place by the following proceeding:

1. → Power-off your system.




**CAUTION**

Make sure that the working contacts from the relay module are disconnected from the power supply!

2. → Remove connector:

Insert your screwdriver from above into one of the indentations.

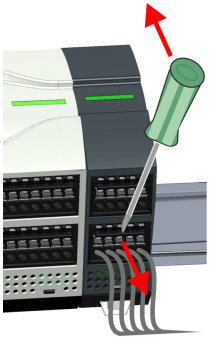

3. → Push the screwdriver backwards:


→ The connector is unlocked and can be removed.



**CAUTION**

Via wrong operation such as pressing the screwdriver downward, the connector may be damaged!

4. → In this way, remove all plugged connectors on the periphery module.



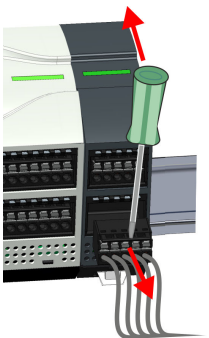



#### Replace the periphery module

1. → Remove the modules that are connected to the module to be replaced by pulling their release levers outwards until these engage audible ...

2. → ... and move the modules accordingly.

3. → Remove the periphery module with a rotation upwards from the mounting rail.

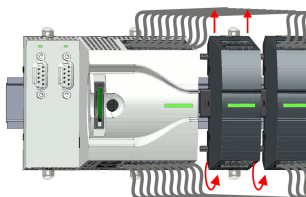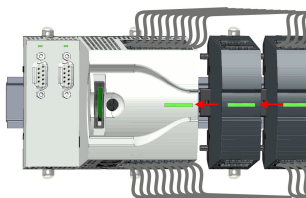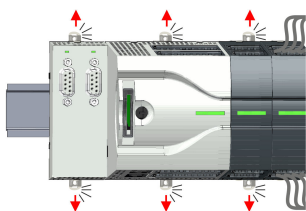


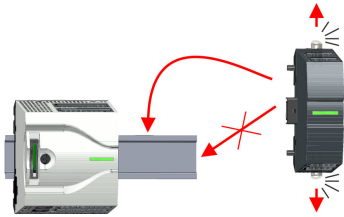


4. → Pull the locking levers outwards until these engage audible.

**CAUTION**


It is not allowed to mount the module sideways on the mounting rail, as otherwise the module may be damaged!

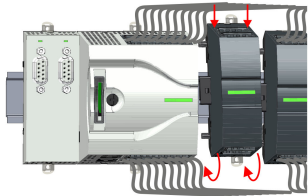

5. → Plug the periphery module from the top onto the mounting rail and turn the periphery module downward until it rests on the mounting rail.

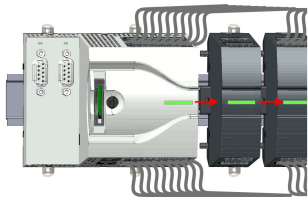

6. → Reconnect all modules by pushing them together again on the mounting rail.

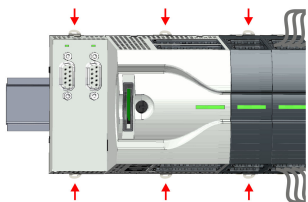

7. → Move the locking levers back to the initial position.



8. → Remove the connectors, which are not necessary.



9. → Plug again the wired connectors.  
 ➔ Now you can bring your system back into operation.

### 2.6.3.1 Easy Maintenance

#### Overview

*Easy Maintenance* means the support for adding and removing modules during operation without having to restart the system. There are the following behaviors:

- Periphery module is removed
  - The CPU detects a module failure on the backplane bus.
  - Diagnostic message ‘*System MICRO bus failure*’ (0x39D0) is triggered.
  - OB 86 is called. If this is not available, the CPU switches to STOP otherwise it remains in RUN.
  - The red LED of the status bar of the CPU lights up.
  - The I/O data of all modules become invalid.
- Identical periphery module is plugged
  - The CPU detects the module return on the backplane bus.
  - The red LED of the status bar of the CPU gets off.
  - All green LEDs of the status bars of the peripheral modules get on and all the red LEDs of the status bars of the peripheral modules get off.
  - Diagnostic message ‘*System MICRO bus recovery*’ (0x38D0) is triggered.
  - OB 86 is called. If this is not available, the CPU switches to STOP otherwise it remains in RUN.
  - The I/O data of all modules become valid again.
- Wrong periphery module is plugged
  - The CPU detects the wrong module.
  - Diagnostic message ‘*System MICRO bus recovery, but expected configuration does not match actual configuration*’ (0x38D1) is triggered.
  - The red LED of the status bar of the CPU remains on.
  - The red LED of the status bar of the wrong I/O module flashes.
  - OB 86 is called. If this is not available, the CPU switches to STOP otherwise it remains in RUN.
  - With the exception of the wrong module, the I/O data of all modules become valid again.



*Please note that the CPU switches to STOP, if there is no OB 86 configured when adding or removing System MICRO modules!*

## 2.7 Industrial security and installation guidelines

### 2.7.1 Industrial security in information technology

#### Latest version

This chapter can also be found as a guide '*Industrial IT Security*' in the '*Download Center*' of [www.yaskawa.eu.com](http://www.yaskawa.eu.com)

#### Hazards

The topic of data security and access protection has become increasingly important in the industrial environment. The increased networking of entire industrial systems to the network levels within the company together with the functions of remote maintenance have all served to increase vulnerability. Hazards can arise from:

- Internal manipulation such as technical errors, operating and program errors and deliberate program or data manipulation.
- External manipulation such as software viruses, worms and trojans.
- Human carelessness such as password phishing.

#### Precautions

The most important precautions to prevent manipulation and loss of data security in the industrial environment are:

- Encrypting the data traffic by means of certificates.
- Filtering and inspection of the traffic by means of VPN - "Virtual Private Networks".
- Identification of the user by "Authentication" via save channels.
- Segmenting in protected automation cells, so that only devices in the same group can exchange data.
- Deactivation of unnecessary hardware and software.

#### Further Information

You can find more information about the measures on the following websites:

- Federal Office for Information Technology → [www.bsi.bund.de](http://www.bsi.bund.de)
- Cybersecurity & Infrastructure Security Agency → [us-cert.cisa.gov](http://us-cert.cisa.gov)
- VDI / VDE Society for Measurement and Automation Technology → [www.vdi.de](http://www.vdi.de)

### 2.7.1.1 Protection of hardware and applications

#### Precautions

- Do not integrate any components or systems into public networks.
  - Use VPN "Virtual Private Networks" for use in public networks. This allows you to control and filter the data traffic accordingly.
- Always keep your system up-to-date.
  - Always use the latest firmware version for all devices.
  - Update your user software regularly.
- Protect your systems with a firewall.
  - The firewall protects your infrastructure internally and externally.
  - This allows you to segment your network and isolate entire areas.
- Secure access to your plants via user accounts.
  - If possible, use a central user management system.
  - Create a user account for each user for whom authorization is essential.
  - Always keep user accounts up-to-date and deactivate unused user accounts.
- Secure access to your plants via secure passwords.
  - Change the password of a standard login after the first start.
  - Use strong passwords consisting of upper/lower case, numbers and special characters. The use of a password generator or manager is recommended.
  - Change the passwords according to the rules and guidelines that apply to your application.
- Deactivate inactive communication ports respectively protocols.
  - Only the communication ports that are used for communication should be activated.
  - Only the communication protocols that are used for communication should be activated.
- Consider possible defence strategies when planning and securing the system.
  - The isolation of components alone is not sufficient for comprehensive protection. An overall concept is to be drawn up here, which also provides defensive measures in the event of a cyber attack.
  - Periodically carry out threat assessments. Among others, a comparison is made here between the protective measures taken and those required.
- Limit the use of external storage media.
  - Via external storage media such as USB memory sticks or SD memory cards, malware can get directly into a system while bypassing a firewall.
  - External storage media or their slots must be protected against unauthorized physical access, e.g. by using a lockable control cabinet.
  - Make sure that only authorized persons have access.
  - When disposing of storage media, make sure that they are safely destroyed.
- Use secure access paths such as HTTPS or VPN for remote access to your plant.
- Enable security-related event logging in accordance with the applicable security policy and legal requirements for data protection.

### 2.7.1.2 Protection of PC-based software

#### Precautions

Since PC-based software is used for programming, configuration and monitoring, it can also be used to manipulate entire systems or individual components. Particular caution is required here!

- Use user accounts on your PC systems.
  - If possible, use a central user management system.
  - Create a user account for each user for whom authorization is essential.
  - Always keep user accounts up-to-date and deactivate unused user accounts.
- Protect your PC systems with secure passwords.
  - Change the password of a standard login after the first start.
  - Use strong passwords consisting of upper/lower case, numbers and special characters. The use of a password generator or manager is recommended.
  - Change the passwords according to the rules and guidelines that apply to your application.
- Enable security-related event logging in accordance with the applicable security policy and legal requirements for data protection.
- Protect your PC systems by security software.
  - Install virus scanners on your PC systems to identify viruses, trojans and other malware.
  - Install software that can detect phishing attacks and actively prevent them.
- Always keep your software up-to-date.
  - Update your operating system regularly.
  - Update your software regularly.
- Make regular backups and store the media at a safe place.
- Regularly restart your PC systems. Only boot from storage media that are protected against manipulation.
- Use encryption systems on your storage media.
- Perform security assessments regularly to reduce the risk of manipulation.
- Use only data and software from approved sources.
- Uninstall software which is not used.
- Disable unused services.
- Activate a password-protected screen lock on your PC systems.
- Always lock your PC systems as soon as you leave your PC workstation.
- Do not click any links that come from unknown sources. If necessary ask, e.g. on e-mails.
- Use secure access paths such as HTTPS or VPN for remote access to your PC system.

### 2.7.2 Installation guidelines

#### General

The installation guidelines contain information about the interference free deployment of a PLC system. There is the description of the ways, interference may occur in your PLC, how you can make sure the electromagnetic compatibility (EMC), and how you manage the isolation.

#### What does EMC mean?

Electromagnetic compatibility (EMC) means the ability of an electrical device, to function error free in an electromagnetic environment without being interfered respectively without interfering the environment.

The components are developed for the deployment in industrial environments and meets high demands on the EMC. Nevertheless you should project an EMC planning before installing the components and take conceivable interference causes into account.

**Possible interference causes**

Electromagnetic interferences may interfere your control via different ways:

- Electromagnetic fields (RF coupling)
- Magnetic fields with power frequency
- Bus system
- Power supply
- Protected earth conductor

Depending on the spreading medium (lead bound or lead free) and the distance to the interference cause, interferences to your control occur by means of different coupling mechanisms.

There are:

- galvanic coupling
- capacitive coupling
- inductive coupling
- radiant coupling

**Basic rules for EMC**

In the most times it is enough to take care of some elementary rules to guarantee the EMC. Please regard the following basic rules when installing your PLC.

- Take care of a correct area-wide grounding of the inactive metal parts when installing your components.
  - Install a central connection between the ground and the protected earth conductor system.
  - Connect all inactive metal extensive and impedance-low.
  - Please try not to use aluminium parts. Aluminium is easily oxidizing and is therefore less suitable for grounding.
- When cabling, take care of the correct line routing.
  - Organize your cabling in line groups (high voltage, current supply, signal and data lines).
  - Always lay your high voltage lines and signal respectively data lines in separate channels or bundles.
  - Route the signal and data lines as near as possible beside ground areas (e.g. suspension bars, metal rails, tin cabinet).
- Proof the correct fixing of the lead isolation.
  - Data lines must be shielded.
  - Analog lines must be shielded. When transmitting signals with small amplitudes the one sided laying of the isolation may be favourable.
  - Cables for frequency inverters, servo and stepper motors must be shielded.
  - Lay the line isolation extensively on an isolation/protected earth conductor rail directly after the cabinet entry and fix the isolation with cable clamps.
  - Make sure that the isolation/protected earth conductor rail is connected impedance-low with the cabinet.
  - Use metallic or metallised plug cases for isolated data lines.
- In special use cases you should appoint special EMC actions.
  - Consider to wire all inductivities with erase links.
  - Please consider luminescent lamps can influence signal lines.



- Create a homogeneous reference potential and ground all electrical operating supplies when possible.
  - Please take care for the targeted employment of the grounding actions. The grounding of the PLC serves for protection and functionality activity.
  - Connect installation parts and cabinets with your PLC in star topology with the isolation/protected earth conductor system. So you avoid ground loops.
  - If there are potential differences between installation parts and cabinets, lay sufficiently dimensioned potential compensation lines.

### Isolation of conductors

Electrical, magnetically and electromagnetic interference fields are weakened by means of an isolation, one talks of absorption. Via the isolation rail, that is connected conductive with the rack, interference currents are shunt via cable isolation to the ground. Here you have to make sure, that the connection to the protected earth conductor is impedance-low, because otherwise the interference currents may appear as interference cause.

When isolating cables you have to regard the following:

- If possible, use only cables with isolation tangle.
- The hiding power of the isolation should be higher than 80%.
- Normally you should always lay the isolation of cables on both sides. Only by means of the both-sided connection of the isolation you achieve high quality interference suppression in the higher frequency area. Only as exception you may also lay the isolation one-sided. Then you only achieve the absorption of the lower frequencies. A one-sided isolation connection may be convenient, if:
  - the conduction of a potential compensating line is not possible.
  - analog signals (some mV respectively  $\mu\text{A}$ ) are transferred.
  - foil isolations (static isolations) are used.
- With data lines always use metallic or metallised plugs for serial couplings. Fix the isolation of the data line at the plug rack. Do not lay the isolation on the PIN 1 of the plug bar!
- At stationary operation it is convenient to strip the insulated cable interruption free and lay it on the isolation/protected earth conductor line.
- To fix the isolation tangles use cable clamps out of metal. The clamps must clasp the isolation extensively and have well contact.
- Lay the isolation on an isolation rail directly after the entry of the cable in the cabinet.



#### CAUTION

#### Please regard at installation!

At potential differences between the grounding points, there may be a compensation current via the isolation connected at both sides.

Remedy: Potential compensation line

General data for the System MICRO

## 2.8 General data for the System MICRO

Conformity and approval		
Conformity		
CE	2014/35/EU	Low Voltage Directive
	2014/30/EU	EMC Directive
RoHS (EU)	2011/65/EU	Restriction of the use of certain hazardous substances in electrical and electronic equipment
UKCA	2016 No. 1101	Electrical Equipment (Safety) Regulations
	2016 No. 1091	Electromagnetic Compatibility Regulations
RoHS (UK)	2012 No. 3032	Use of Certain Hazardous Substances
Approval		
UL	-	Refer to Technical data

Protection of persons and device protection		
Type of protection	-	IP20
Electrical isolation		
to the field bus	-	electrically isolated
to the process level	-	electrically isolated
Insulation resistance	-	-
Insulation voltage to reference earth		
Inputs / outputs	-	AC / DC 50V, test voltage AC 500V
Protective measures	-	against short circuit

Environmental conditions to EN 61131-2		
Climatic		
Storage / transport	EN 60068-2-14	-25...+70°C
Operation		
Horizontal installation hanging	EN 61131-2	0...+60°C
Horizontal installation lying	EN 61131-2	0...+60°C
Vertical installation	EN 61131-2	0...+60°C
Air humidity	EN 60068-2-30	RH1 (without condensation, rel. humidity 10...95%)
Pollution	EN 61131-2	Degree of pollution 2
Installation altitude max.	-	2000m
Mechanical		
Oscillation	EN 60068-2-6	1g, 9Hz ... 150Hz
Shock	EN 60068-2-27	15g, 11ms

Mounting conditions		
Mounting place	-	In the control cabinet
Mounting position	-	Horizontal and vertical

EMC	Standard	Comment	
Emitted interference	EN 61000-6-4	Class A (Industrial area)	
Noise immunity zone B	EN 61000-6-2	Industrial area	
		EN 61000-4-2	ESD 8kV at air discharge (degree of severity 3), 4kV at contact discharge (degree of severity 2)
		EN 61000-4-3	HF field immunity (casing) 80MHz ... 1000MHz, 10V/m, 80% AM (1kHz) 1.4GHz ... 2.0GHz, 3V/m, 80% AM (1kHz) 2GHz ... 2.7GHz, 1V/m, 80% AM (1kHz)
		EN 61000-4-6	HF conducted 150kHz ... 80MHz, 10V, 80% AM (1kHz)
		EN 61000-4-4	Burst
	EN 61000-4-5	Surge <sup>1</sup>	

1) Due to the high-energetic single pulses with Surge an appropriate external protective circuit with lightning protection elements like conductors for lightning and overvoltage is necessary.

## 2.8.1 Use in difficult operating conditions



**Without additional protective measures, the products must not be used in locations with difficult operating conditions; e.g. due to:**

- dust generation
- chemically active substances (corrosive vapors or gases)
- strong electric or magnetic fields

M21-1BH00 - DI 16xDC 24V

### 3 Digital in-/output


#### 3.1 M21-1BH00 - DI 16xDC 24V

**Properties**



The module detects the binary control signals from the process level and transmits them isolated to the higher-level bus system. It has 16 channels and their status is indicated by LEDs.

- 16 digital Inputs isolated to the backplane bus
- Suitable for switches and proximity switches
- Status indication of the channels via LEDs

**Structure**

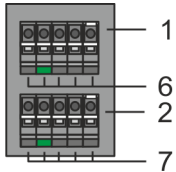

- 1 X2: Connector DI +0.4 ... +0.7
- 2 X1: Connector DI +0.0 ... +0.3
- 3 Status bar periphery module
- 4 X3: Connector DI +1.0 ... +1.3
- 5 X4: Connector DI +1.4 ... +1.7
- 6 X2: LEDs DI +0.4 ... +0.7
- 7 X1: LEDs DI +0.0 ... +0.3
- 8 X3: LEDs DI +1.0 ... +1.3
- 9 X4: LEDs DI +1.4 ... +1.7

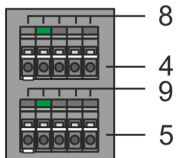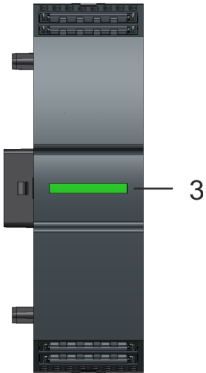


**Status bar**

LED	Description
	LEDs green on: Backplane bus communication and module status are OK
	LED red on: Module reports an error
	LED red blinks with 1Hz: Error in configuration
	LEDs green are blinking with 1Hz: Error backplane bus communication

LEDs connectors

Digital input	LED	Description
DI +0.0 DI +0.7	<input checked="" type="checkbox"/> green	Digital I+0.0 ... 0.7 has "1" signal
	<input type="checkbox"/>	Digital I+0.0 ... 0.7 has "0" signal
DI +1.0 ... DI +1.7	<input checked="" type="checkbox"/> green	Digital input I+1.0 ... 1.7 has "1" signal
	<input type="checkbox"/>	Digital input I+1.0 ... 1.7 has "0" signal

Pin assignment

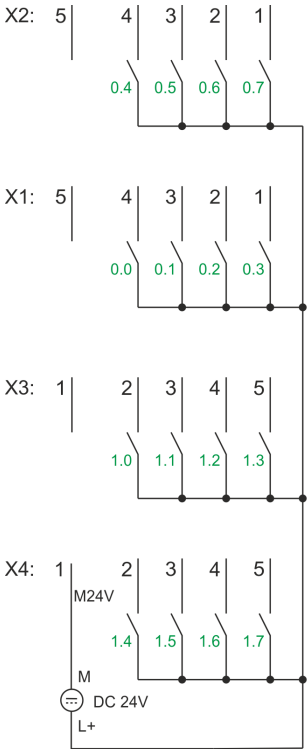

X	Pin	Function	Type	LED	Description
X2:	1	+0.7	I	<input checked="" type="checkbox"/> green	Digital input DI 7
	2	+0.6	I	<input checked="" type="checkbox"/> green	Digital input DI 6
	3	+0.5	I	<input checked="" type="checkbox"/> green	Digital input DI 5
	4	+0.4	I	<input checked="" type="checkbox"/> green	Digital input DI 4
	5	-	-		reserved
X1:	1	+0.3	I	<input checked="" type="checkbox"/> green	Digital input DI 3
	2	+0.2	I	<input checked="" type="checkbox"/> green	Digital input DI 2
	3	+0.1	I	<input checked="" type="checkbox"/> green	Digital input DI 1
	4	+0.0	I	<input checked="" type="checkbox"/> green	Digital input DI 0
	5	-	-		reserved
X3:	1	-	-		reserved
	2	+1.0	I	<input checked="" type="checkbox"/> green	Digital input DI 8
	3	+1.1	I	<input checked="" type="checkbox"/> green	Digital input DI 9
	4	+1.2	I	<input checked="" type="checkbox"/> green	Digital input DI 10
	5	+1.3	I	<input checked="" type="checkbox"/> green	Digital input DI 11
X4:	1	0V	I		Ground DI
	2	+1.4	I	<input checked="" type="checkbox"/> green	Digital input DI 12
	3	+1.5	I	<input checked="" type="checkbox"/> green	Digital input DI 13
	4	+1.6	I	<input checked="" type="checkbox"/> green	Digital input DI 14
	5	+1.7	I	<input checked="" type="checkbox"/> green	Digital input DI 15
I: Input					

M21-1BH00 - DI 16xDC 24V

**Input area**

At the CPU the input area is embedded to the corresponding address area.

Addr.	Name	Byte	Function
+0	PII	0	Status of the inputs <ul style="list-style-type: none"> <li>■ Bit 0: DI 0</li> <li>■ Bit 1: DI 1</li> <li>■ Bit 2: DI 2</li> <li>■ Bit 3: DI 3</li> <li>■ Bit 4: DI 4</li> <li>■ Bit 5: DI 5</li> <li>■ Bit 6: DI 6</li> <li>■ Bit 7: DI 7</li> </ul>
		1	Status of the inputs <ul style="list-style-type: none"> <li>■ Bit 0: DI 8</li> <li>■ Bit 1: DI 9</li> <li>■ Bit 2: DI 10</li> <li>■ Bit 3: DI 11</li> <li>■ Bit 4: DI 12</li> <li>■ Bit 5: DI 13</li> <li>■ Bit 6: DI 14</li> <li>■ Bit 7: DI 15</li> </ul>

**Output area**

No byte of the output area is used by the module.

## 3.1.1 Technical data

Order no.	M21-1BH00
Type	SM M21 - Digital input
Module ID	0014 9FC2
<b>Current consumption/power loss</b>	
Current consumption from backplane bus	65 mA
Power loss	0.9 W
<b>Technical data digital inputs</b>	
Number of inputs	16
Cable length, shielded	1000 m
Cable length, unshielded	600 m
Rated load voltage	-
Current consumption from load voltage L+ (without load)	25 mA
Rated value	DC 20.4...28.8 V
Input voltage for signal "0"	DC 0...5 V
Input voltage for signal "1"	DC 15...28.8 V
Input voltage hysteresis	-
Signal logic input	Sinking input
Frequency range	-
Input resistance	-
Input capacitance	-
Input current for signal "1"	3 mA
Connection of Two-Wire-BEROs possible	✓
Max. permissible BERO quiescent current	0.5 mA
Input delay of "0" to "1"	3 ms
Input delay of "1" to "0"	3 ms
Number of simultaneously utilizable inputs horizontal configuration	16
Number of simultaneously utilizable inputs vertical configuration	16
Input characteristic curve	IEC 61131-2, type 1
Initial data size	16 Bit
<b>Status information, alarms, diagnostics</b>	
Status display	green LED per channel
Interrupts	no
Process alarm	no
Diagnostic interrupt	no
Diagnostic functions	no
Diagnostics information read-out	none

Order no.	M21-1BH00
Module state	none
Module error display	red LED
Channel error display	none
<b>Isolation</b>	
Between channels	-
Between channels of groups to	-
Between channels and backplane bus	✓
Insulation tested with	DC 500 V
<b>Datasizes</b>	
Input bytes	2
Output bytes	0
Parameter bytes	0
Diagnostic bytes	0
<b>Housing</b>	
Material	PPE / PPE GF10
Mounting	Profile rail 35 mm
<b>Mechanical data</b>	
Dimensions (WxHxD)	26 mm x 88 mm x 71 mm
Net weight	91 g
Weight including accessories	91 g
Gross weight	104 g
<b>Environmental conditions</b>	
Operating temperature	0 °C to 60 °C
Storage temperature	-25 °C to 70 °C
<b>Certifications</b>	
UL certification	yes
KC certification	yes
UKCA certification	yes
ChinaRoHS certification	yes




### 3.2 M22-1BH00 - DO 16xDC 24V 0.5A

#### Properties

The module detects the binary control signals from the higher-level bus system and transports them to the process level via the outputs. It has 16 channels and their status is indicated by LEDs.

- 16 digital outputs isolated to the backplane bus
- Status indication of the channels via LEDs
- Diagnostic function can be parametrized in case of overload

#### Structure

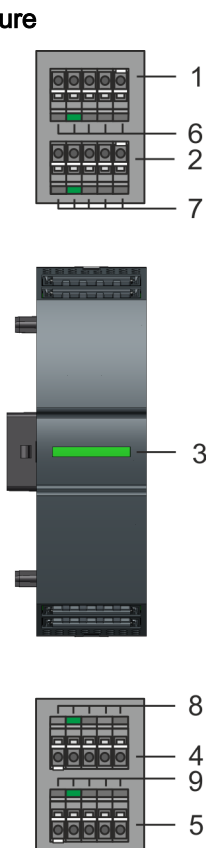

- 1 X2: Terminal DO +0.4 ... +0.7
- 2 X1: Terminal DO +0.0 ... +0.3
- 3 Status bar periphery module
- 4 X3: Terminal DO +1.0 ... +1.3
- 5 X4: Terminal DO +1.4 ... +1.7
- 6 X2: LEDs DO +0.4 ... +0.7
- 7 X1: LEDs DO +0.0 ... +0.3
- 8 X3: LEDs DO +1.0 ... +1.3
- 9 X4: LEDs DO +1.4 ... +1.7

#### Status bar


LED	Description
	LEDs green on: Backplane bus communication and module status are OK
	LED red on: Module reports an error, e.g. on overload at an output
	LED red blinks with 1Hz: Error in configuration
	LEDs green are blinking with 1Hz: Error backplane bus communication

#### LEDs connectors

Digital output	LED	Description
DO +0.0 ... DO +0.7		Digital output Q+0.0 ... 0.7 has "1" signal
		Digital output Q+0.0 ... 0.7 has "0" signal
DO +1.0 ... DO +1.7		Digital output Q+1.0 ... 1.7 has "1" signal
		Digital output Q+1.0 ... 1.7 has "0" signal

M22-1BH00 - DO 16xDC 24V 0.5A

Pin assignment

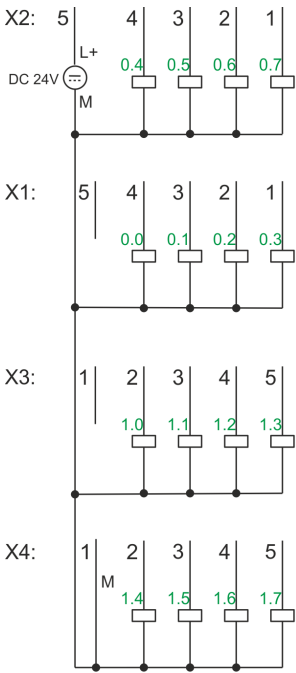

X	Pin	Function	Type	LED	Description
X2:	1	+0.7	O	green	Digital output DO 7
	2	+0.6	O	green	Digital output DO 6
	3	+0.5	O	green	Digital output DO 5
	4	+0.4	O	green	Digital output DO 4
	5	DC 24V	I		Power supply DC 24V (L+)
X1:	1	+0.3	O	green	Digital output DO 3
	2	+0.2	O	green	Digital output DO 2
	3	+0.1	O	green	Digital output DO 1
	4	+0.0	O	green	Digital output DO 0
	5	-	-		reserved
X3:	1	-	-		reserved
	2	+1.0	O	green	Digital output DO 8
	3	+1.1	O	green	Digital output DO 9
	4	+1.2	O	green	Digital output DO 10
	5	+1.3	O	green	Digital output DO 11
X4:	1	0V	O		Power supply ground
	2	+1.4	O	green	Digital output DO 12
	3	+1.5	O	green	Digital output DO 13
	4	+1.6	O	green	Digital output DO 14
	5	+1.7	O	green	Digital output DO 15

I: Input, O: Output



**CAUTION**

Feeding in voltage at an output is not allowed and can destroy the module!

Input area

No byte of the input area is used by the module.

## Output area


Addr.	Name	Byte	Function
+0	PIQ	0	Status of the outputs <ul style="list-style-type: none"> <li>■ Bit 0: DO 0</li> <li>■ Bit 1: DO 1</li> <li>■ Bit 2: DO 2</li> <li>■ Bit 3: DO 3</li> <li>■ Bit 4: DO 4</li> <li>■ Bit 5: DO 5</li> <li>■ Bit 6: DO 6</li> <li>■ Bit 7: DO 7</li> </ul>
		1	Status of the outputs <ul style="list-style-type: none"> <li>■ Bit 0: DO 8</li> <li>■ Bit 1: DO 9</li> <li>■ Bit 2: DO 10</li> <li>■ Bit 3: DO 11</li> <li>■ Bit 4: DO 12</li> <li>■ Bit 5: DO 13</li> <li>■ Bit 6: DO 14</li> <li>■ Bit 7: DO 15</li> </ul>

## Parameter data

The module has the following parameter data, which can be set in the hardware configuration:

- Diagnostic interrupt
  - When enabled, a diagnostic interrupt is triggered when an output is overloaded.



*Regardless of the parametrization, the red LED  of the status bar lights up on overload. The LED lights up as long as there is an overload.*

### 3.2.1 Diagnostic data

Via the parametrization you may activate a diagnostic interrupt for the module. With a diagnostic interrupt the module serves for diagnostic data for `diagnosticincoming`. As soon as the reason for releasing a diagnostic interrupt is no longer present, the diagnostic interrupt<sub>going</sub> automatically takes place. Via record set 01h the diagnostic data can be accessed.

Name	Bytes	Function	Default
ERR_A	1	Diagnostic	00h
MODTYP	1	Module information	0Fh
ERR_C	1	reserved	00h
ERR_D	1	reserved	00h
CHTYP	1	Channel type	72h
NUMBIT	1	Number diagnostic bits per channel	00h
NUMCH	1	Number channels of the module	00h
CHERR	1	reserved	00h
CH0ERR...CH7ERR	8	reserved	00h
DIAG_US	4	µs ticker (32bit)	00h

#### *ERR\_A Diagnostic*

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> <li>■ Bit 0: set at module failure</li> <li>■ Bit 1: set at internal error</li> <li>■ Bit 2: set at external error</li> <li>■ Bit 3: reserved</li> <li>■ Bit 4: set at overload at an output</li> <li>■ Bit 6 ... 5: reserved</li> <li>■ Bit 7: set at error in parametrization</li> </ul>

#### *MODTYP Module information*

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> <li>■ Bit 3 ... 0: module class                             <ul style="list-style-type: none"> <li>- 1111b: digital module</li> </ul> </li> <li>■ Bit 7 ... 4: reserved</li> </ul>

#### *CHTYP Channel type*

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> <li>■ Bit 6 ... 0: Channel type                             <ul style="list-style-type: none"> <li>- 72h: Digital output</li> </ul> </li> <li>■ Bit 7: reserved</li> </ul>

#### *NUMBIT Diagnostic bits*

Byte	Bit 7 ... 0
0	Number of diagnostic bits per channel (here 00h)

**NUMCH Channels**

Byte	Bit 7 ... 0
0	Number of channels of the module (here 00h)

**DIAG\_US  $\mu$ s ticker**

Byte	Bit 7 ... 0
0...3	Value of the $\mu$ s ticker at the moment of the diagnostic <ul style="list-style-type: none"><li>■ In the System MICRO module there is a timer (<math>\mu</math>s ticker). With PowerON the timer starts counting with 0. After <math>2^{32}-1\mu</math>s the timer starts with 0 again.</li></ul>

## 3.2.2 Technical data

Order no.	M22-1BH00
Type	SM M22 - Digital output
Module ID	0114 2F50
<b>Current consumption/power loss</b>	
Current consumption from backplane bus	80 mA
Power loss	0.7 W
<b>Technical data digital outputs</b>	
Number of outputs	16
Cable length, shielded	1000 m
Cable length, unshielded	600 m
Rated load voltage	DC 20.4...28.8 V
Current consumption from load voltage L+ (without load)	20 mA
Total current per group, horizontal configuration, 40°C	8 A
Total current per group, horizontal configuration, 60°C	8 A
Total current per group, vertical configuration	8 A
Output current at signal "1", rated value	0.5 A
Signal logic output	Sourcing output
Output delay of "0" to "1"	30 µs
Output delay of "1" to "0"	175 µs
Minimum load current	-
Lamp load	10 W
Parallel switching of outputs for redundant control of a load	not possible
Parallel switching of outputs for increased power	not possible
Actuation of digital input	✓
Switching frequency with resistive load	max. 1000 Hz
Switching frequency with inductive load	max. 0.5 Hz
Switching frequency on lamp load	max. 10 Hz
Internal limitation of inductive shut-off voltage	L+ (-45 V)
Short-circuit protection of output	yes, electronic
Trigger level	1 A
Number of operating cycle of relay outputs	-
Switching capacity of contacts	-
Output data size	16 Bit
<b>Status information, alarms, diagnostics</b>	
Status display	green LED per channel
Interrupts	yes, parameterizable
Process alarm	no
Diagnostic interrupt	yes, parameterizable

Order no.	M22-1BH00
Diagnostic functions	yes, parameterizable
Diagnostics information read-out	possible
Supply voltage display	green LED
Group error display	red LED
Channel error display	none
<b>Isolation</b>	
Between channels	-
Between channels of groups to	-
Between channels and backplane bus	✓
Insulation tested with	DC 500 V
<b>Datasizes</b>	
Input bytes	0
Output bytes	2
Parameter bytes	0
Diagnostic bytes	20
<b>Housing</b>	
Material	PPE / PPE GF10
Mounting	Profile rail 35 mm
<b>Mechanical data</b>	
Dimensions (WxHxD)	26 mm x 88 mm x 71 mm
Net weight	96 g
Weight including accessories	96 g
Gross weight	109 g
<b>Environmental conditions</b>	
Operating temperature	0 °C to 60 °C
Storage temperature	-25 °C to 70 °C
<b>Certifications</b>	
UL certification	yes
KC certification	yes
UKCA certification	yes
ChinaRoHS certification	yes

M22-1HF10 - DO 8xRelay


### 3.3 M22-1HF10 - DO 8xRelay

#### Properties



The module detects the binary control signals from the higher-level bus system and transports them to the process level via the relay outputs. It has 8 channels and the status of each channel is monitored via LEDs.

- 8 digital outputs isolated to the backplane bus
  - in groups of two, each with a common terminal
  - isolated between channels and backplane bus
  - isolated between channels of groups
- DC30V / AC230V, 2A
- Status indication of the channels via LEDs

#### Structure

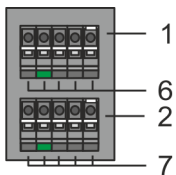

- 1 X2: Terminal DO (R2/+0.2, R3/+0.3)
- 2 X1: Terminal DO (R0/+0.0, R1/+0.1)
- 3 Status bar periphery module
- 4 X3: Terminal DO (R4/+0.4, R5/+0.5)
- 5 X4: Terminal DO (R6/+0.6, R7/+0.7)
- 6 X2: LEDs DO (R2/+0.2, R3/+0.3)
- 7 X1: LEDs DO (R0/+0.0, R1/+0.1)
- 8 X3: LEDs DO (R4/+0.4, R5/+0.5)
- 9 X4: LEDs DO (R6/+0.6, R7/+0.7)

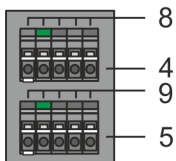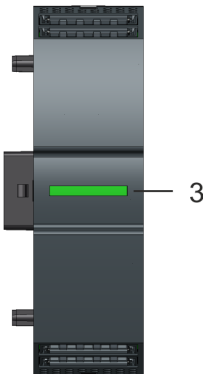



#### Status bar


LED	Description
	LEDs green on: Backplane bus communication and module status are OK
	LED red on: Module reports an error with overload, short circuit or overheat
	LED red blinks with 1Hz: Error in configuration
	LEDs green are blinking with 1Hz: Error backplane bus communication









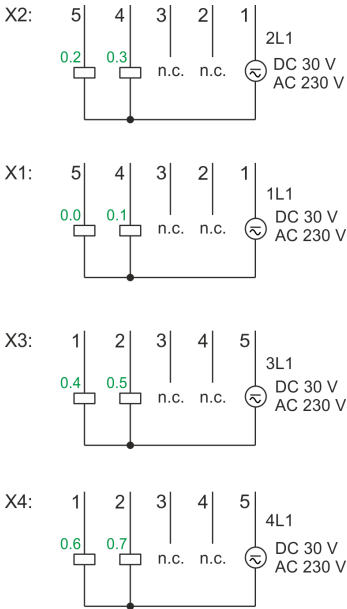

LEDs connectors

Relay output	LED	Description
DO +0.0 ... DO +0.7	 green	Relay output Q+0.0 ... 0.7 has "1" signal
		Relay output Q+0.0 ... 0.7 has "0" signal

Pin assignment



	Pin	Function	Type	LED	Description
X2:	1	2L1	O	-	Relay output DO 2 and DO 3
	2	-	-	-	must not be connected
	3	-	-	-	must not be connected
	4	+0.3	O	 green	Relay output DO 3
	5	+0.2	O	 green	Relay output DO 2
X1:	1	1L1	O	-	Relay output DO 0 und DO 1
	2	-	-	-	must not be connected
	3	-	-	-	must not be connected
	4	+0.1	O	 green	Relay output DO 1
	5	+0.0	O	 green	Relay output DO 0
X3:	1	+0.4	O	 green	Relay output DO 4
	2	+0.5	O	 green	Relay output DO 5
	3	-	-	-	must not be connected
	4	-	-	-	must not be connected
	5	3L1	O	-	Relay output DO 4 and DO 5
X4:	1	+0.6	O	 green	Relay output DO 6
	2	+0.7	O	 green	Relay output DO 7
	3	-	-	-	must not be connected
	4	-	-	-	must not be connected
	5	4L1	O	-	Relay output DO 6 and DO 7

O: Output



**DANGER**


- Due to the hardware the free pins must not be connected!
- The mixed operation of touch and non touch voltages is not permitted!



*When using inductive load please take a suitable protector (see installation guidelines).*

M22-1HF10 - DO 8xRelay

**Maximum load / Service life (typical)**

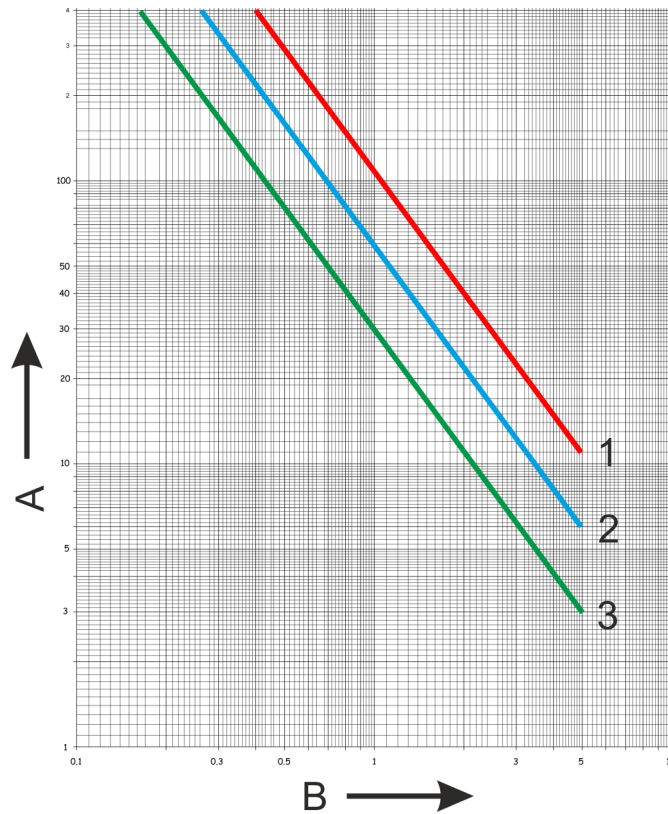

- A Operating cycles (x 10<sup>4</sup>)
- B Current in A
- 1 DC 30V resistive load
- 2 AC 250V resistive load, DC 30V L/R = 7ms
- 3 AC 250V cosφ = 0.4

**Input area**

No byte of the input area is used by the module.

**Output area**

Addr.	Name	Byte	Function
+0	PIQ	0	Status of the outputs <ul style="list-style-type: none"> <li>■ Bit 0: Relay output DO 0</li> <li>■ Bit 1: Relay output DO 1</li> <li>■ Bit 2: Relay output DO 2</li> <li>■ Bit 3: Relay output DO 3</li> <li>■ Bit 4: Relay output DO 4</li> <li>■ Bit 5: Relay output DO 5</li> <li>■ Bit 6: Relay output DO 6</li> <li>■ Bit 7: Relay output DO 7</li> </ul>

## 3.3.1 Technical data

Order no.	M22-1HF10
Type	SM M22 - Digital Output
Module ID	0115 AFC8
<b>Current consumption/power loss</b>	
Current consumption from backplane bus	140 mA
Power loss	1.5 W
<b>Technical data digital outputs</b>	
Number of outputs	8
Cable length, shielded	1000 m
Cable length, unshielded	600 m
Rated load voltage	DC 30 V/ AC 230 V
Current consumption from load voltage L+ (without load)	-
Total current per group, horizontal configuration, 40°C	4 A
Total current per group, horizontal configuration, 60°C	4 A
Total current per group, vertical configuration	4 A
Output current at signal "1", rated value	2 A
Signal logic output	Isolated
Output delay of "0" to "1"	10 ms
Output delay of "1" to "0"	5 ms
Minimum load current	-
Lamp load	-
Parallel switching of outputs for redundant control of a load	not possible
Parallel switching of outputs for increased power	not possible
Actuation of digital input	-
Switching frequency with resistive load	max. 0.33 Hz
Switching frequency with inductive load	max. 0.33 Hz
Switching frequency on lamp load	max. 0.33 Hz
Internal limitation of inductive shut-off voltage	-
Short-circuit protection of output	-
Trigger level	-
Number of operating cycle of relay outputs	-
Switching capacity of contacts	5 A
Output data size	8 Bit
<b>Status information, alarms, diagnostics</b>	
Status display	green LED per channel
Interrupts	no
Process alarm	no
Diagnostic interrupt	no

Order no.	M22-1HF10
Diagnostic functions	no
Diagnostics information read-out	none
Supply voltage display	green LED
Group error display	red LED
Channel error display	none
<b>Isolation</b>	
Between channels	-
Between channels of groups to	2
Between channels and backplane bus	✓
Insulation tested with	AC 2200 V
<b>Datasizes</b>	
Input bytes	0
Output bytes	1
Parameter bytes	0
Diagnostic bytes	0
<b>Housing</b>	
Material	PPE / PPE GF10
Mounting	Profile rail 35 mm
<b>Mechanical data</b>	
Dimensions (WxHxD)	26 mm x 88 mm x 71 mm
Net weight	110 g
Weight including accessories	110 g
Gross weight	123 g
<b>Environmental conditions</b>	
Operating temperature	0 °C to 60 °C
Storage temperature	-25 °C to 70 °C
<b>Certifications</b>	
UL certification	yes
KC certification	yes
UKCA certification	yes
ChinaRoHS certification	yes


### 3.4 M23-1BH00 - DI8/DO8 0.5A

#### Properties



The module is a mixed module. It has 8 input channels and 8 output channels. The status of the channels is indicated by LEDs.

- 8 digital inputs and 8 digital outputs electrically isolated from the backplane bus
- Status indication of the channels via LEDs
- Diagnostic function can be parametrized in case of overload

#### Structure

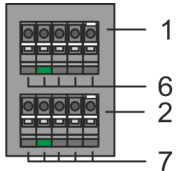

- 1 X2: Terminal DO +0.4 ... +0.7
- 2 X1: Terminal DO +0.0 ... +0.3
- 3 Status bar periphery module
- 4 X3: Terminal DI +1.0 ... +1.3
- 5 X4: Terminal DI +1.4 ... +1.7
- 6 X2: LEDs DO +0.4 ... +0.7
- 7 X1: LEDs DO +0.0 ... +0.3
- 8 X3: LEDs DI +1.0 ... +1.3
- 9 X4: LEDs DI +1.4 ... +1.7

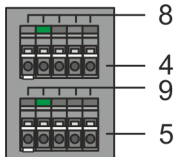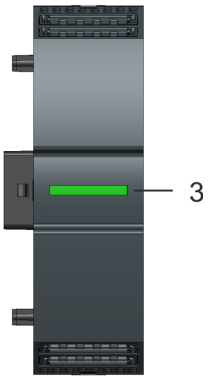





#### Status bar

LED	Description
	LEDs green on: Backplane bus communication and module status are OK
	LED red on: Module reports an error, e.g. on overload at an output
	LED red blinks with 1Hz: Error in configuration
	LEDs green are blinking with 1Hz: Error backplane bus communication


M23-1BH00 - DI8/DO8 0.5A









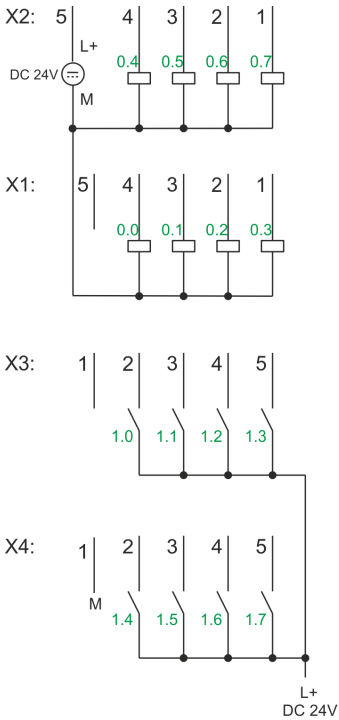







LEDs connectors

Digital output	LED	Description
DO +0.0 ... DO +0.7	 green	Digital output Q+0.0 ... 0.7 has "1" signal
		Digital output Q+0.0 ... 0.7 has "0" signal

Digital input	LED	Description
DI +1.0 ... DI +1.7	 green	Digital input I+1.0 ... 1.7 has "1" signal
		Digital input I+1.0 ... 1.7 has "0" signal

Pin assignment



X	Pin	Function	Type	LED	Description
X2:	1	+0.7	O	 green	Digital output DO 7
	2	+0.6	O	 green	Digital output DO 6
	3	+0.5	O	 green	Digital output DO 5
	4	+0.4	O	 green	Digital output DO 4
	5	DC24V	I		Load voltage DC 24V for DO (L+)
X1:	1	+0.3	O	 green	Digital output DO 3
	2	+0.2	O	 green	Digital output DO 2
	3	+0.1	O	 green	Digital output DO 1
	4	+0.0	O	 green	Digital output DO 0
	5	-	-		reserved
X3:	1	-	-		reserved
	2	+1.0	I	 green	Digital input DI 4
	3	+1.1	I	 green	Digital input DI 5
	4	+1.2	I	 green	Digital input DI 6
	5	+1.3	I	 green	Digital input DI 7
X4:	1	0V	I		Ground DI
	2	+1.4	I	 green	Digital input DI 0
	3	+1.5	I	 green	Digital input DI 1
	4	+1.6	I	 green	Digital input DI 2
	5	+1.7	I	 green	Digital input DI 3

## Input area

Addr.	Name	Byte	Function
+0	PII	0	Status of the inputs <ul style="list-style-type: none"> <li>■ Bit 0: DI 0</li> <li>■ Bit 1: DI 1</li> <li>■ Bit 2: DI 2</li> <li>■ Bit 3: DI 3</li> <li>■ Bit 4: DI 4</li> <li>■ Bit 5: DI 5</li> <li>■ Bit 6: DI 6</li> <li>■ Bit 7: DI 7</li> </ul>

## Output area


Addr.	Name	Byte	Function
+0	PIQ	0	Status of the outputs <ul style="list-style-type: none"> <li>■ Bit 0: DO 0</li> <li>■ Bit 1: DO 1</li> <li>■ Bit 2: DO 2</li> <li>■ Bit 3: DO 3</li> <li>■ Bit 4: DO 4</li> <li>■ Bit 5: DO 5</li> <li>■ Bit 6: DO 6</li> <li>■ Bit 7: DO 7</li> </ul>

## Parameter data

The module has the following parameter data, which can be set in the hardware configuration:

- Diagnostic interrupt
  - When enabled, a diagnostic interrupt is triggered when an output is overloaded.



Regardless of the parametrization, the red LED  of the status bar lights up on overload. The LED lights up as long as there is an overload.

### 3.4.1 Diagnostic data

Via the parametrization you may activate a diagnostic interrupt for the module. With a diagnostic interrupt the module serves for diagnostic data for `diagnosticincoming`. As soon as the reason for releasing a diagnostic interrupt is no longer present, the diagnostic interrupt`going` automatically takes place. Via record set 01h the diagnostic data can be accessed.

Name	Bytes	Function	Default
ERR_A	1	Diagnostic	00h
MODTYP	1	Module information	0Fh
ERR_C	1	reserved	00h
ERR_D	1	reserved	00h
CHTYP	1	Channel type	72h
NUMBIT	1	Number diagnostic bits per channel	00h
NUMCH	1	Number channels of the module	00h
CHERR	1	reserved	00h
CH0ERR...CH7ERR	8	reserved	00h
DIAG_US	4	µs ticker (32bit)	00h

#### *ERR\_A Diagnostic*

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> <li>■ Bit 0: set at module failure</li> <li>■ Bit 1: set at internal error</li> <li>■ Bit 2: set at external error</li> <li>■ Bit 3: reserved</li> <li>■ Bit 4: set at overload at an output</li> <li>■ Bit 6 ... 5: reserved</li> <li>■ Bit 7: set at error in parametrization</li> </ul>

#### *MODTYP Module information*

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> <li>■ Bit 3 ... 0: module class                             <ul style="list-style-type: none"> <li>- 1111b: digital module</li> </ul> </li> <li>■ Bit 7 ... 4: reserved</li> </ul>

#### *CHTYP Channel type*

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> <li>■ Bit 6 ... 0: Channel type                             <ul style="list-style-type: none"> <li>- 72h: Digital output</li> </ul> </li> <li>■ Bit 7: reserved</li> </ul>

#### *NUMBIT Diagnostic bits*

Byte	Bit 7 ... 0
0	Number of diagnostic bits per channel (here 00h)



**NUMCH Channels**

Byte	Bit 7 ... 0
0	Number of channels of the module (here 00h)

**DIAG\_US  $\mu$ s ticker**

Byte	Bit 7 ... 0
0...3	Value of the $\mu$ s ticker at the moment of the diagnostic <ul style="list-style-type: none"><li>■ In the System MICRO module there is a timer (<math>\mu</math>s ticker). With PowerON the timer starts counting with 0. After <math>2^{32}-1\mu</math>s the timer starts with 0 again.</li></ul>

## 3.4.2 Technical data

Order no.	M23-1BH00
Type	SM M23 - Digital in-/output
Module ID	0015 3F49
<b>Current consumption/power loss</b>	
Current consumption from backplane bus	80 mA
Power loss	0.7 W
<b>Technical data digital inputs</b>	
Number of inputs	8
Cable length, shielded	1000 m
Cable length, unshielded	600 m
Rated load voltage	DC 24 V
Current consumption from load voltage L+ (without load)	25 mA
Rated value	DC 20.4...28.8 V
Input voltage for signal "0"	DC 0...5 V
Input voltage for signal "1"	DC 15...28.8 V
Input voltage hysteresis	-
Signal logic input	Sinking input
Frequency range	-
Input resistance	-
Input current for signal "1"	3 mA
Connection of Two-Wire-BEROs possible	✓
Max. permissible BERO quiescent current	0.5 mA
Input delay of "0" to "1"	3 ms
Input delay of "1" to "0"	3 ms
Number of simultaneously utilizable inputs horizontal configuration	8
Number of simultaneously utilizable inputs vertical configuration	8
Input characteristic curve	IEC 61131-2, type 1
Initial data size	8 Bit
<b>Technical data digital outputs</b>	
Number of outputs	8
Cable length, shielded	1000 m
Cable length, unshielded	600 m
Rated load voltage	DC 20.4...28.8 V
Reverse polarity protection of rated load voltage	-
Current consumption from load voltage L+ (without load)	20 mA
Total current per group, horizontal configuration, 40°C	4 A

Order no.	M23-1BH00
Total current per group, horizontal configuration, 60°C	4 A
Total current per group, vertical configuration	4 A
Output current at signal "1", rated value	0.5 A
Output delay of "0" to "1"	30 µs
Output delay of "1" to "0"	175 µs
Minimum load current	-
Lamp load	10 W
Parallel switching of outputs for redundant control of a load	not possible
Parallel switching of outputs for increased power	not possible
Actuation of digital input	✓
Switching frequency with resistive load	max. 1000 Hz
Switching frequency with inductive load	max. 0.5 Hz
Switching frequency on lamp load	max. 10 Hz
Internal limitation of inductive shut-off voltage	L+ (-45 V)
Short-circuit protection of output	yes, electronic
Trigger level	1 A
Number of operating cycle of relay outputs	-
Switching capacity of contacts	-
Output data size	8 Bit
<b>Status information, alarms, diagnostics</b>	
Status display	green LED per channel
Interrupts	yes, parameterizable
Process alarm	no
Diagnostic interrupt	yes, parameterizable
Diagnostic functions	yes, parameterizable
Diagnostics information read-out	possible
Module state	green LED
Module error display	red LED
Channel error display	none
<b>Isolation</b>	
Between channels	-
Between channels of groups to	-
Between channels and backplane bus	✓
Insulation tested with	DC 500 V
<b>Datasizes</b>	
Input bytes	1
Output bytes	1
Parameter bytes	0

M23-1BH00 - DI8/DO8 0.5A &gt; Technical data

Order no.	M23-1BH00
Diagnostic bytes	20
<b>Housing</b>	
Material	PPE / PPE GF10
Mounting	Profile rail 35 mm
<b>Mechanical data</b>	
Dimensions (WxHxD)	26 mm x 88 mm x 71 mm
Net weight	92 g
Weight including accessories	92 g
Gross weight	105 g
<b>Environmental conditions</b>	
Operating temperature	0 °C to 60 °C
Storage temperature	-25 °C to 70 °C
<b>Certifications</b>	
UL certification	yes
KC certification	yes
UKCA certification	yes
ChinaRoHS certification	yes